

V-3338 GPS/GSM Personal Tracker
manual by www.mastergeo.com

INFORMATION:

This device is a remote transmitter of geographical coordinates (latitude, longitude) using the GSM cellular network. Allows the tracking of people, animals, objects, handbags, backpacks, etc. through the site www.mastergeo.com.

First, you need to buy a chip (SIM Card), preferably prepaid, enable it and add credits. Make sure that your line provides the data service (GPRS, EDGE or 3G). This tracker is dual-band (900/1800Mhz), your cellular company should be one of these frequencies. **With the tracker off and very carefully** remove the back cover, remove the battery and insert the chip (SIM Card).

COMMENTS:

Before using the tracker for the first time, charge the battery for 12 hours.

The USB cable is used exclusively to recharge the battery. You can recharge the battery connecting the USB cable into a PC or the adapter (110/220V). Recharging is complete when the red LED flashes slowly.

To use the panic button, press until you feel the vibration of the tracker.



GREEN LED (GPS)

Off: no GPS signal
Flashing: GPS position located

BLUE LED (GSM)

Constant lighting: no GSM signal or without chip (SIM Card)
Flash once interval 8s: GSM receiver work well and standby
Flash quickly: in GSM connection

RED LED (POWER)

Constant lighting: charging
Slow flashing: charging was completed
Fast flashing: low power

Once installed, go to www.mastergeo.com and login with your user and password. Create a user if you do not have. All options and configuration instructions will appear on your screen by clicking on *Add new tracker*.